


Belt & Disc Sander

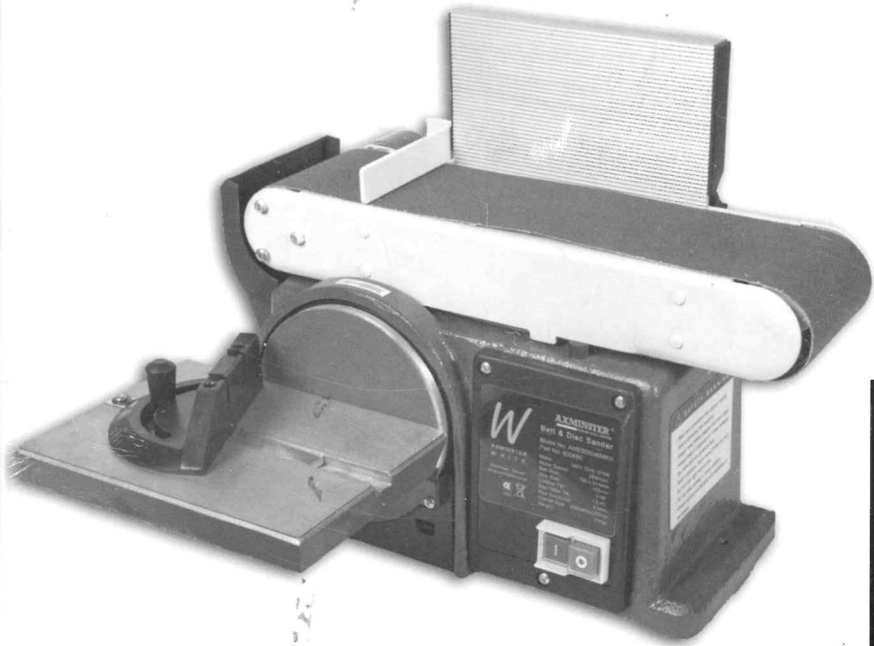

User Manual

600880

W

AXMINSTER
WHITE



Axminster Reference No: **AWEBDS46MKII**

www.axminster.co.uk



Copied from CE Certificate

The undersigned, F. Nispel authorised
by Weihai Y&X Electrical Machinery Co., Ltd.
Sunjia Tuan Town Weihai, Shandong 264201
P.R.China

declares that this product:

**Belt and Disc Sander
MM491E**

manufactured by Weihai Y&X Electrical Machinery
Co. is in compliance with the following standards
or standardisation documents in accordance with
Council Directives

EN 55014-1: 2000+A1+A2

EN 61000-3-2: 2000

EN 61000-3-3: 1995+A1

EN 55014-2: 1997+A1



FREEPHONE 0800 371822

03

What's in the Box...



Model Number:

MM491E

Box:

- | | | |
|---|---|--------------------------------|
| 1 No. Belt & Disc Sander
(Sanding Belt Fitted) | → | 1 No. Work Stop Plate |
| 1 No. 150mm Sanding Disc | | 1 No. Sanding Disc Cover Plate |
| 1 No. Disc Table | | 1 No. Mitre Fence |
| 1 No. Disc Table Support Bracket | ← | 1 No. Instruction Manual |

Bag 1 Containing:

- | | | |
|-------------------------------|---|------------------------------|
| 4 No. M6 Bolts | → | 2 No. M4 Phillip Head Screws |
| 5 No. M6 Washer | | 4 No. Shake Proof Washers. |
| 1 No. Star Knob Threaded Bolt | ← | 1 No. Adhesive Scale Label |

Bag 2 Containing: Adjustable Fence Assembly Part 1

- | | | |
|---|---|---|
| 1 No. Mounting Guide Assembly, two rods shouldered and threaded at each end, with a metal strap and 4 nuts and 2 washers. | → | 1 No. Tower Bracket Casting, with two butterfly thumb screws. |
|---|---|---|

Bag 3 Containing: Adjustable Fence Assembly Part 2

- 1 No. Concave Bracket Casting
- 1 No. Fence with Base Plate Casting.

Having opened the box, remove all the components stowed in the packaging. Place these carefully to one side. Remove the top packaging and lift the machine out of the box and place upon a clear flat surface, taking care not to trap or pinch the power cable under the chassis. Remove any other items from the box. Having unpacked your sander and its various components, if you do not wish to retain the packaging please dispose of it responsibly, especially any polystyrene; most of the rest of the packaging is biodegradable.

Please read though the Section entitled Identification and Description of parts of the Sander, as this will ensure that you better understand the terminology we will use during the assembly and setting up phases.

NOTE: Please read the Instruction Manual prior to using your new machine; as well as the operating procedures for your new machine, there are numerous hints and tips to help you to use the machine safely and to maintain its efficiency and prolong its life. Keep this Instruction Manual readily accessible for any others who may also be required to use the machine.

General Instructions for 230V Machines...

Good Working Practices/Safety

The following suggestions will enable you to observe good working practices, keep yourself and fellow workers safe and maintain your tools and equipment in good working order.



WARNING!! KEEP TOOLS AND EQUIPMENT OUT OF THE REACH OF YOUNG CHILDREN

Mains Powered Tools (General) /Disc & Belt Sander

Primary Precautions

These machines are supplied with a moulded 13 Amp. Plug and 3 core power cable. Before using the tool inspect the cable and the plug to make sure that neither are damaged. If any damage is visible have the tool inspected/repaired by a suitably qualified person. If it is necessary to replace the plug, it is preferable to use an 'unbreakable' type that will resist damage on site. Only use a 13 Amp plug, make sure the cable clamp is tightened securely. Fuse at 5 Amp. It is also good practice to use switched outlets. If extension leads are to be used, carry out the same safety checks on them, and ensure that they are correctly rated to safely supply the current that is required for your machine.

This machine is intended primarily for inside/workshop usage.

Work Place/Environment

Always mount the machine on a flat, level stable surface. There are several methods of achieving this, bolting the machine directly to a 'good solid workbench', bolting the machine to a sturdy base board that can be clamped to the 'good solid workbench'; create an independent entity by bolting the machine to its own stand. However you mount your machine, make sure it is fastened down and stable before use.

Paper belts and discs do not respond well to wet or damp conditions. In the worst case the adhesives holding the belt and the abrasive fail completely, the belts fall apart and the abrasive becomes a soggy mess against the edge of your work piece.

Try to keep the machine in a reasonably dry, warm environment. If this is not possible; or if the machine is to remain unused for some time, at least remove the belt, put in a 'plastic' bag (your partner will take a dim view of sawdust trails) and store in a warm dry place. I'm afraid I can offer no suggestions for the disc, unless you have upgraded to some form of 'velco'. fastening method, in which case, do the same as with the belt. (P.S. don't forget... don't leave the spare belts/discs in the damp either).

Keep the work area as uncluttered as is practical, this includes personnel as well as material.



WARNING!! UNDER NO CIRCUMSTANCES SHOULD CHILDREN BE ALLOWED IN WORK AREAS



FREEPHONE 0800 371822



WARNING! THE SANDING DISC CANNOT BE DECLUTCHED FROM THE BELT AND VICE VERSA, BOTH FUNCTIONS ARE ACTIVE WHEN THE MACHINE IS RUNNING. REMEMBER THIS, AND DO NOT LEAVE LOOSE OBJECTS OF ANY DESCRIPTION, ON THE MACHINE IF IT IS GOING TO BE USED.

Once the sander is mounted, carry out any setting operations, (mitre, tilt..?), and remove all tools used in the setting operations (if any) and place safely out of the way. If you are working long lengths of material arrange for extra support beyond the boundary of the machine, and check you have sufficient room to manoeuvre the material through all the operations you will wish to carry out.

It is good practice to leave the machine unplugged until work is about to commence, also make sure to unplug the machine when it is not in use. Always disconnect by pulling on the plug body and not the cable.

After fitting a new sanding disc, it is good practice to lightly sand across the left side of the disc with a reasonable sized (20mm x 50mm) piece of timber to make sure the sanding disc is correctly 'seated' on the disc. The sanding action will press the sanding disc firmly back against the disc itself.

It is not good practice to wear gloves whilst sanding as one tends to lose the 'feel' of the workpiece/sander contact, but obviously this removes the safety barrier between your fingers and the sanding surface. Remain focused and exercise caution whilst sanding.

DO NOT sand very small pieces of work with bare hands; try to construct some form of holder.

MAKE SURE you are comfortable before you start work, balanced, not reaching etc. If the work you are carrying out is liable to generate excessive grit or dust or chips, wear the appropriate safety clothing, goggles, masks etc., If the work operation appears to be excessively noisy, wear ear-defenders. If you wear your hair in a long style, wearing a cap, safety helmet, hairnet, even a sweatband, will minimise the possibility of your hair being caught up in the rotating parts of the machine, likewise, consideration should be given to the removal of rings and wristwatches, if these are liable to be a 'snag' hazard.

DO NOT work with cutting/abrasive tools of any description if you are tired, your attention is wandering or you are being subjected to distraction. A deep graze, a lost fingertip or worse, is not worth it!

DO NOT use the machine within the designated safety areas of flammable liquid stores or in areas where there may be volatile gases. There are very expensive, very specialised machines for working in these areas, **THIS IS NOT ONE OF THEM.**

CHECK that sanding surfaces are still sufficiently abrasive to carry out the work you intend. Sanding belt cleaning sticks are an efficient method of prolonging the life of the belts and discs, and will also maintain their operating performance.





Specific to Sanding Machines...

CHECK that the belts or discs are undamaged; torn edges can pick up on the workpiece and will cause the medium to tear, often very rapidly with accompanying sharp flapping edges.

ALWAYS offer the workpiece to the belt/disc so that the motion carries the work against the restraining surface, (i.e. the work stop or the table, (use the left hand side of the disc).

DO NOT press too heavily against the sanding surface, all this will do is slow the sander down. Remember, sanders work by removing small particles of material quickly and heavy pressure works adversely to the cutting process, further, it will accelerate the rate of 'clogging' of the abrasive surfaces, rendering the machine less efficient.

If you are attempting to sand inside curves (over the 'tracking drum') do not press at all, other than to keep the workpiece in contact with the surface, any pressure could upset the tracking geometry. As there is no cushioning effect to the belt passing around the drum, expect an added vibration and compensate for it.

Sanding of certain types of timber may make the fitting of dust extraction mandatory in order to comply with the directives of the HSE. However, even if it is not mandatory, it is strongly recommended that you consider fitting dust extraction. It will certainly reduce the level of dust and grit, and as it helps to remove the waste quicker will certainly prolong the longevity of the abrasive.


Above all, **OBSERVE....** make sure you know what is happening around you, and **USE YOUR COMMON SENSE.**

Initial Assembly...

In order to reduce the footprint of the machine for packaging, several items are dismantled from the machine and need to be re-affixed.


Locate the disc support casting and disc table. Turn the table over, place the bracket onto the table as illustrated. (See fig 1) Locate the three shake proof washers and M6 washers, place them over the threaded holes (See fig 2), insert the three M6 bolts and (finger tighten). Tighten the bolts using a 10mm spanner. (See fig 3) **DO NOT** over tighten, remember this is a casting.

Fig 1

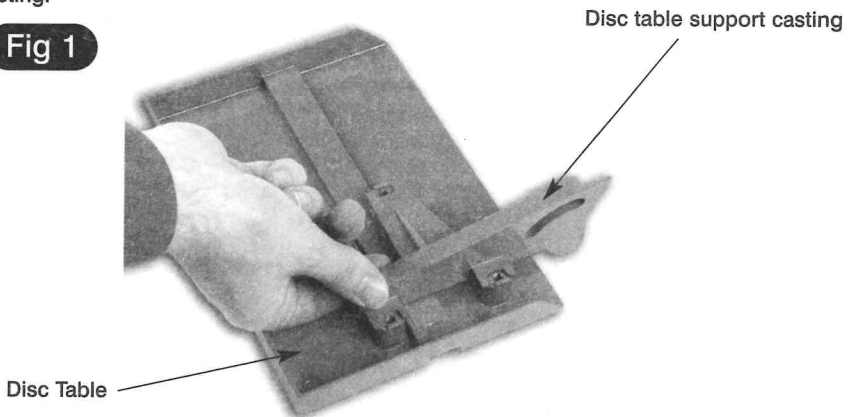

Initial Assembly...


Fig 2

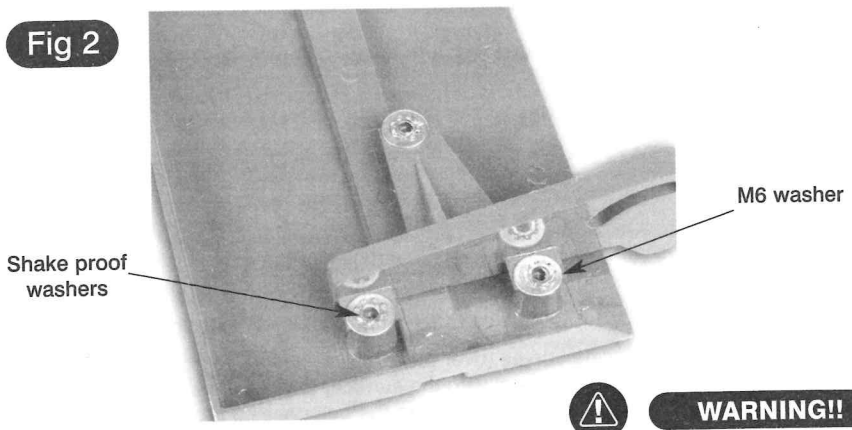

WARNING!!


**DO NOT over tighten
remember this is a
casting**

Fig 3

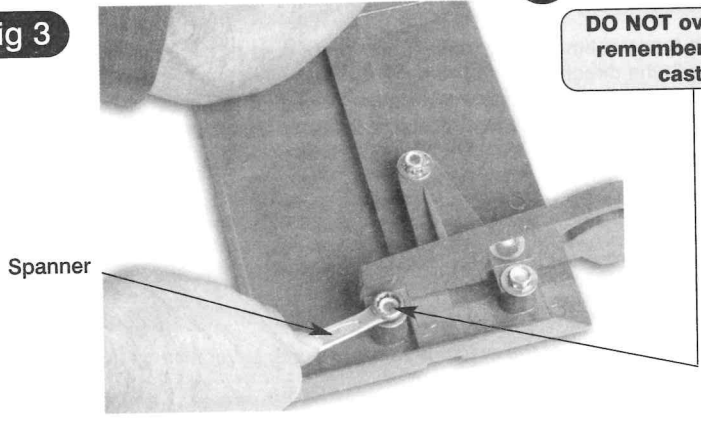

Put the table assembly aside to fit later see page 9.

Fitting the Sanding Disc

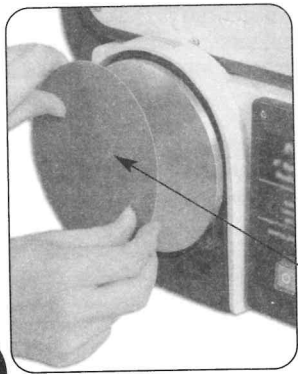

Clean the surface of the disc with a degreasing cleaner, (methylated spirit; acetone nail polish remover borrowed from the female side of the family, if you don't have a proprietary cleaner.) Allow to dry off and wipe over with a clean dry cloth. Locate the sanding disc, peel the cover from the adhesive surface and apply **CAREFULLY** to the disc. (See fig 4) Use a piece of cloth in your hand or wear a glove, to firmly press the abrasive to the disc, the application will be reinforced by a gentle sanding action across the face when you first use the new sanding disc.

Sanding disc

Fig 4

Locate the sanding disc cover plate & the two M4 phillip screws and secure in place as illustrated. (See fig 5)

Sanding disc cover plate

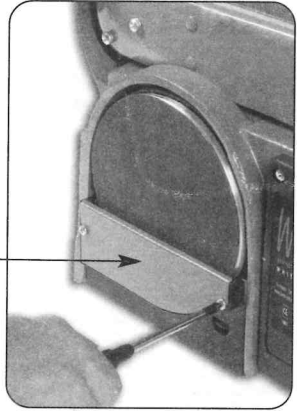


Fig 5

Locate the table scale label, peel back the cover from the adhesive surface and apply CAREFULLY to the extraction port moulding. (See fig 6)

Extraction port moulding

Table scale label


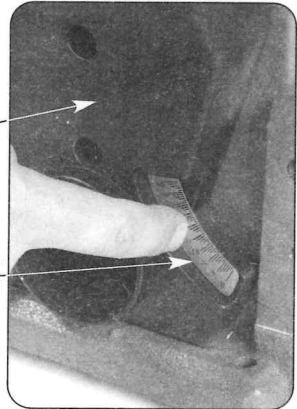


Fig 6

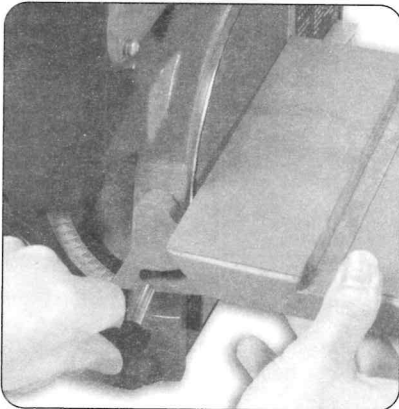

Offer up the table and introduce the star knob threaded bolt through the slot in the clamping quadrant and screw into the chassis. (See fig 7)

Leave sufficient gap between the table edge and the disc by loosening the table fixing bolts and slewing the table until the disc spins freely.


Proceed to tightened up all screws and bolts,

Do not over tighten the bolts, remember the table is a casting. Set the table to 90° according to scale on the extraction port moulding.

Fig 7



Initial Assembly...

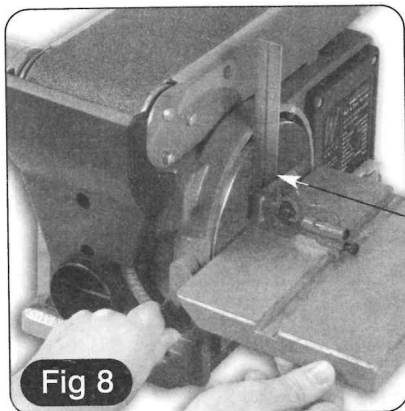

Use a known 90° reference (square?) and check that the table is set square to the sanding disc. If it is not, reset the table until it is correct (See fig 8).

Square

Extraction port moulding

Scale

Fig 8


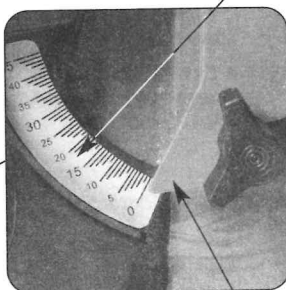


Fig 9b

Index marker

Fig 9

Slide the mitre fence into the tables 'T' slot. (See fig 9) Place a 90° square up against the mitre fence to make sure it's perpendicular to the sanding disc. (See fig 9a) If not, adjust the angle of the mitre fence until correct, and then reset the index marker to read 0° degrees. (See fig 18)

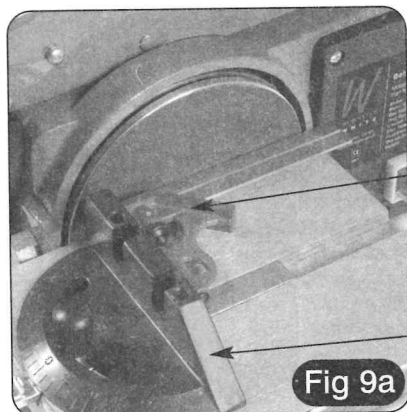







Square

Mitre fence

Fig 9a



Fence Assembly

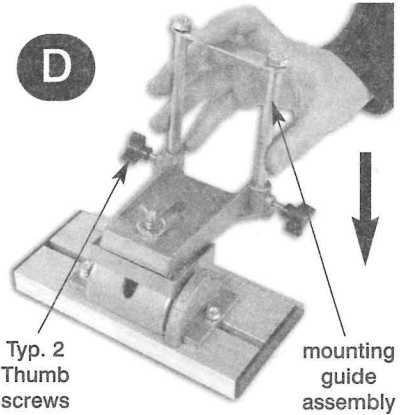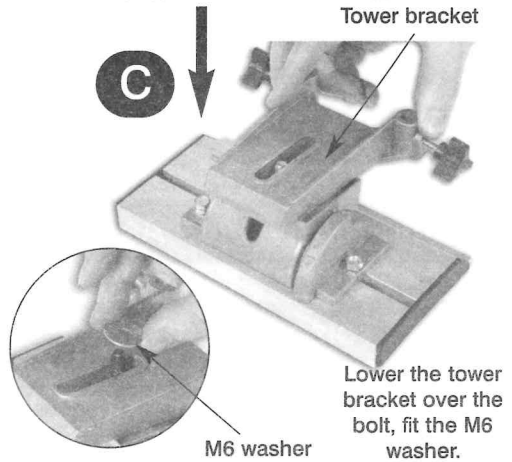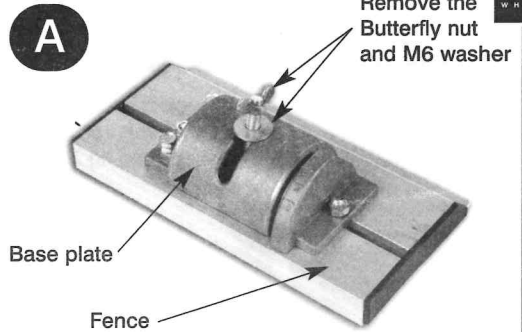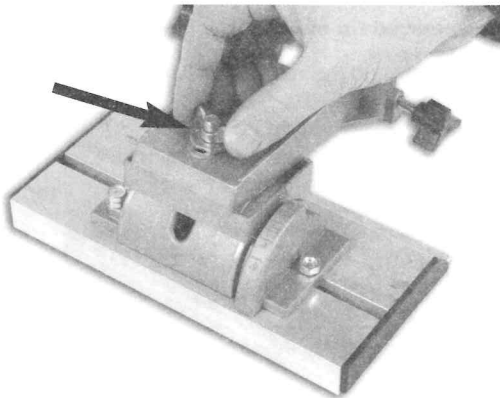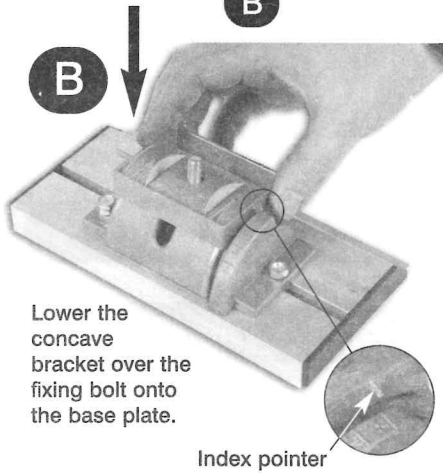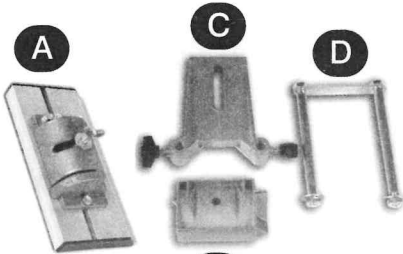

Put aside to fit later see pages 12 & 13

Initial Assembly...

Fitting the workstop plate

Locate the work stop plate for the linisher, and fit to the chassis using the M6 bolt, shake proof washer and M6 washer. (See fig 16).

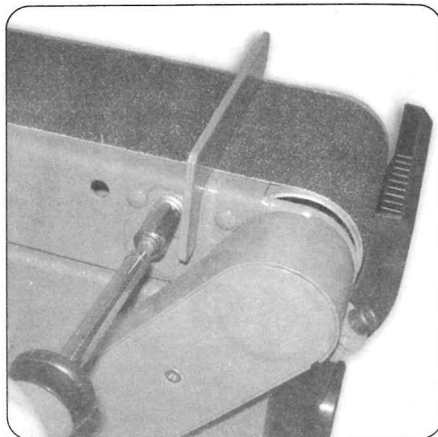


Fig 10

Fitting the Fence Assembly...



DISCONNECT THE MACHINE FROM THE MAINS SUPPLY

Note: You will require a 14mm A/F spanner

To fit the fence assembly requires that you remove the linishing belt to gain access.

PLEASE NOTE: the workstop plate has been removed for clarity

Before starting you will need to tilt the linisher assembly into the vertical position, to do this slacken off the swivel mandrel clench bolt which is located near the drive belt cover, raise the linisher and then re-tighten the bolt to prevent it from coming down. (See figs 11 & 12)

Swivel mandrel clench bolt

Fig 11

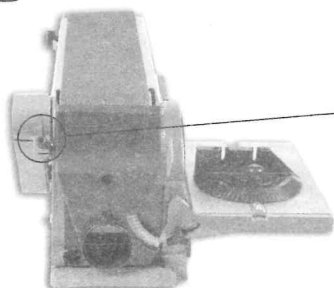


Fig 12


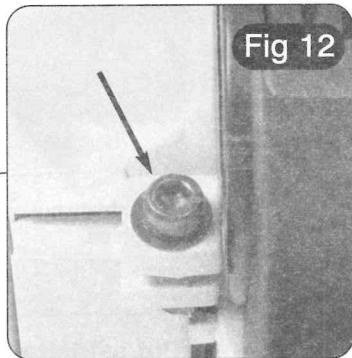



Fig 13

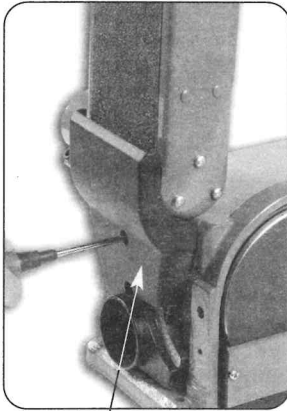

Extraction port moulding

Remove the extraction port moulding by undoing the two Phillip screws (See fig 13)

Fig 14

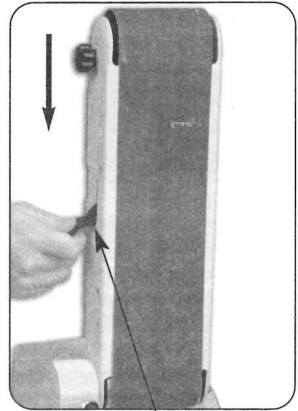

Belt tension lever

Release the belt tension by pressing the belt tension lever towards the drive drum end. (See fig 14)

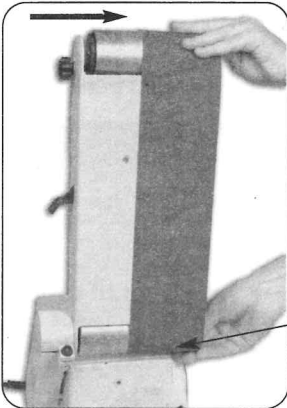


Fig 15


Slide the belt off (See fig 15); you can now access the inside of the linisher casing.

Belt

Locate the fence assembly, remove the two nuts and washers from the mounting rods, line up the mounting rods with the holes in the linisher casing; insert them and fasten in place with the nuts and washers you removed earlier. (See fig 16)

Fig 16

Fence assembly

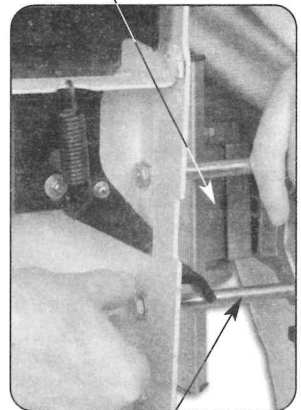

Mounting rods

Replace the belt by sliding it back over the drum then push the tension lever back up towards the tracking drum. Replace the extraction port moulding, taking care to observe the correct alignment between the table index marker & the scale.

Specification...

Axminster No.

600880 (AWEBDS46MKII)

Motor

230V 50Hz 375W

Motor Speed

2850 rpm

Belt Size

100 x 915mm

Usable Flat Linishing Area

95 x 280mm

Linisher Tilt

0-90°

Belt Speed

517 m/min

Disc Diameter

150mm

Disc Table Dimensions

225 x 155mm

Disc Table Tilt

0-45°

Disc speed

2850 rpm

Weight

20kg

Overall size, Belt horizontal, disc table fitted.

Length 536mm Width 460mm Height 370mm

Overall size, Belt Vertical, disc table fitted.

Length 430mm Width 460mm Height 620mm

Dust Extraction Port

63mm diameter

Supplied cable length

2 Meters

Identification and Description of the Sander...

Chassis

(See fig 17)

This is the main body of the machine, all the other components are mounted onto the chassis.

Linisher body

(See fig 17)

This is the long flat box that carries the linishing belt, it is mounted on the chassis via a swivel joint about the drive axle mandrel. It mounts the tensioning/tracking drum, and the various mechanisms for tensioning and tracking the belt.

Linishing belt

(See fig 17)

This is the flat belt that is driven along the linishing platen to provide the long, wide flat abrasive surface upon which the majority of sanding is carried out. Belts of different abrasive types and loadings are available.

Work Stop plate

(See fig 19)

This is a flat metal plate fastened to the linisher chassis. Its purpose is to provide a stop against which the work can be held during sanding.

Disc

(See fig 17)

A 6 inch alloy disc, mounted on the end of the drive drum axle. It can mount a wide range of abrasive types and grits.

On/Off switches

(See fig 18a)

There is an On/Off switch mounted on the machine that controls the main contactor, which fulfills the NVR function of the machine.

Illustration and Parts Description...

Guide fence assembly

Linishing belt

Fig 17

Linisher body

Disc

Chassis

Mitre fence

Locating slot

On/Off switches

Index marker

Disc table

Fig 18a

Off

On

Fig 18



FREEPHONE 0800 371822

Identification and Description of the Sander...

- Drive belt cover** (See fig 19) The cover that guards the drive belt. It must be removed to check the condition of, or to change, the drive belt.
- Drive drum** (See fig 23) This is the drum that provides the belt movement, it is driven by a pulley and drive belt by the motor and is fixed to the chassis and is referenced to the platen, it is the reference against which the 'tracking drum' works in order to maintain the tension and the linear motion of the belt. The drive drum axle fits through a mandrel, around which the swivel joint of the linisher can be rotated.
- Belt tensioning lever** (See fig 19) The belt-tensioning device is a cranked lever; pivoted about halfway along its length on a pin set in the underside of the linisher chassis. A spring is connected to the end of the cranked part of the lever, which pulls it towards the end of the chassis. The idler drum is mounted in a yoke. The stem of the yoke is slotted; this slot also fits over the pivot pin. The yoke is also fastened to the lever, such that the movement of the lever pulls the yoke down the slot releasing the tension of the idler drum against the belt. The cranking of the lever is to enable an 'overcentre hold' of the lever when it is moved to the 'untension' position against the action of the spring. When the lever is pushed in the opposite direction, it moves the yoke back up the slot so that the idler drum is held against the belt under the pressure of the spring.
- Tracking adjuster** (See fig 19) The belt is tracked by pivoting the yoke with the idler drum about the pin in the chassis. The control of this movement is effected by a Star knobbed bolt fitted through a hole in the linisher chassis and introduced into a threaded hole in the side of the yoke. The yoke is held in position using a spring acting between the chassis and the yoke, with its actual position governed by the adjusted length of the threaded bolt.
- Swivel mandrel casting** (See fig 19) This is the casting that mounts the linisher to the main machine chassis, the casting forms a swivel joint over the drive shaft mandrel. The casting is split and is clenched onto the mandrel using a bolt through the two cast lugs. Slackening the bolt allows the linisher to be tilted up to the vertical position.
- Dust extraction port** (See fig 19) The dust extraction port is moulded into the chassis cover, directly below the dust deflector over the drive drum. The lower section of the chassis is accessed by the extraction port, so the resulting draught will remove the dust from the disc sander, and also encourage airflow past the motor.
- Linisher platen** (See fig 23) This is the flat surface of the machine that supports the belt and maintains it in plane during sanding operations.
- Motor** (See fig 27) The motor is housed in the chassis body. A pulley and drive belt connect the motor shaft output to the pulley on the drive drum.
- Air vents** (See fig 24) Preformed ventilation slots in the lower cover plate to allow air to be ducted to the motor for cooling and into the dust extraction system. Ensure that the air vents are not covered during operation and that they do not become clogged.

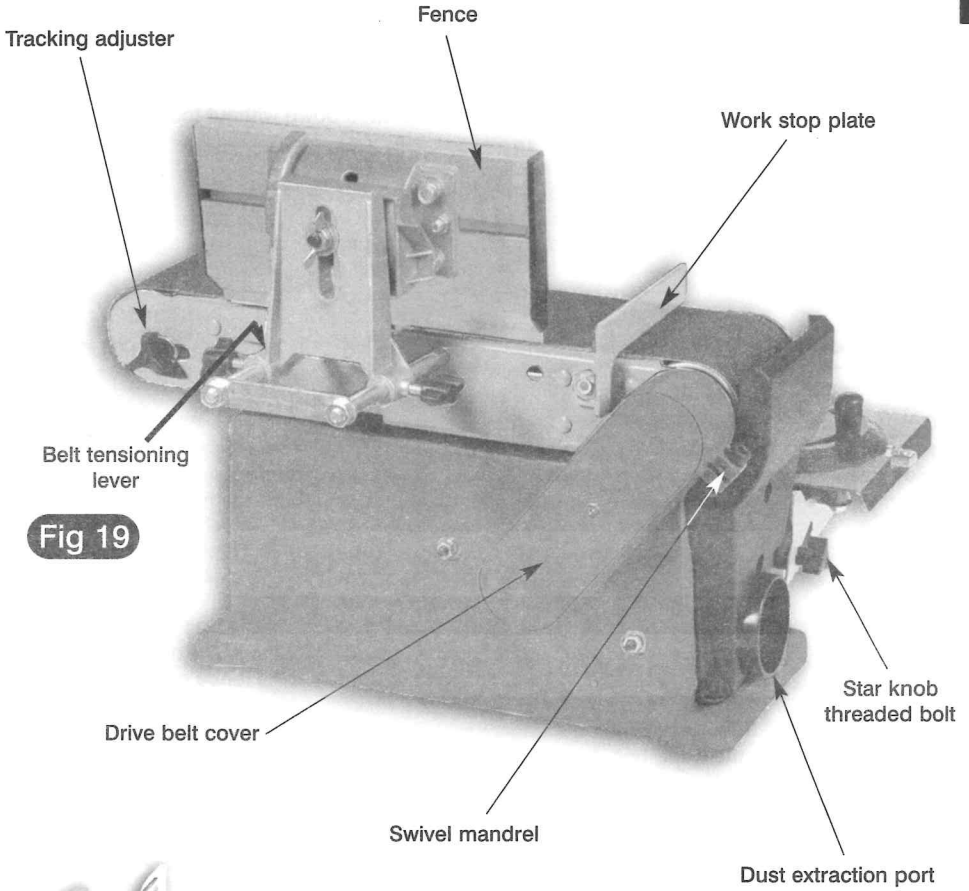


Fig 19

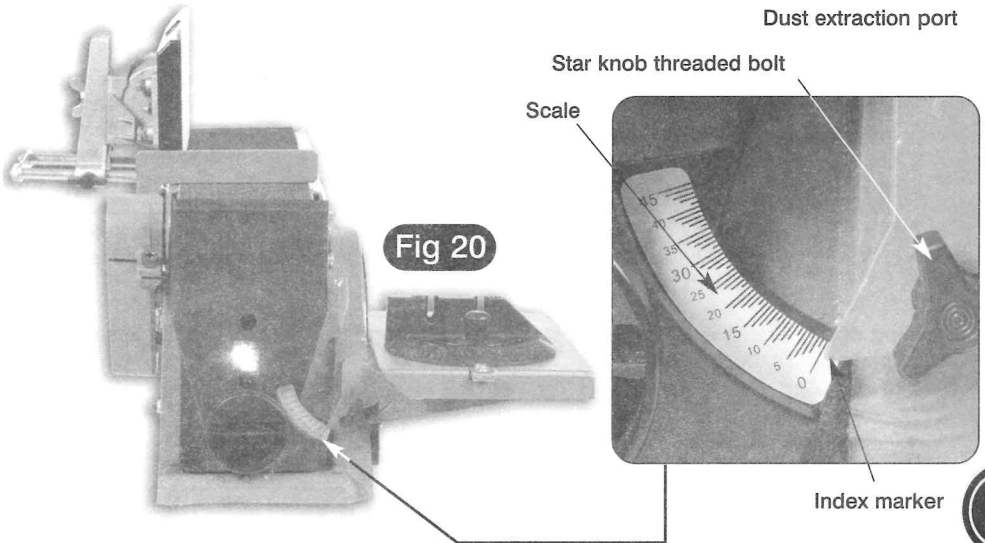


Fig 20

Disc table
(See fig 17)

A good-sized table mounted on a support casting. The Table has a 'T' slot machined into it, parallel to the front edge to allow the mounting of the mitre fence attachment. The underside of the front edge of the table is bevelled so that the table can be tilted down without fouling the sanding disc.

Disc table support casting
(See fig 1)

The support casting is the main support for the disc table. It has the pivot spigot and a slotted quadrant which allows the table to be set to a known angle. The casting has a moulded pointer to read against the scale. The support casting is clamped into position by a star knob threaded bolt, which clamps the quadrant to the chassis.

Mitre fence
(See figs 17 & 18)

The mitre fence assembly is mounted on a 'T' bar which engages in the slot machined in the table. It is capable of being turned through $\pm 60^\circ$.

Guide fence assembly
(See figs 21 & 22)

comprises: - two rods that are shouldered and threaded at each end, a metal strap, a 'tower bracket casting', the two castings that form the pivot joint and the fence itself. The two mounting/guide rods are secured through the metal strap that holds them at a fixed pitch. The base of the 'tower bracket' has a tube housing on either side which fit over the rods and allows it to slide back and forth. Small thumb screws in the housings can be tightened through against the rods allowing the bracket to be 'locked' in position. There is a vertical slot in the tower bracket. The concave bracket casting of the pivoting joint mounts against the tower. On one side of the concave bracket is a 'lazy 'Z' extrusion cast in such a way as to allow it to form the stops for the fence preset angle device. On the other side a small pointer has been cast to act as the index maker for the angle scale. The concave casting is 'slotted' to allow the fixing bolt to pass through it. The flat base plate of the convex part of the pivoting joint is bolted onto the back of the fence by square head bolts and nuts. The bolt heads are captured in 'T' slots in the extrusion that is used for the fence. Loosening the nuts will allow the fence to be slid 'along the bolts' to reposition it. One side of the base plate has a quadrant casting with a raised scale on it which can be read against the index pointer on the concave part; the other side has two threaded holes. The holes have small bolts with lock nuts, and are positioned to correspond with the geometry of the lazy 'Z' on the concave part, and are the other part of the 'angle presetting' device. The convex casting is slotted to allow the fixing bolt to pass through it. The gauge of the slot is such that it will capture the square of the carriage bolt, allowing the butterfly nut to be tightened. The two parts of the pivot joint are fitted together, positioned and then secured with the carriage bolt, which feeds through the two parts of the joint, the slot in the tower bracket and is fastened with a washer and butterfly nut.

Sanding disc cover plate
(See fig 5)

This protective steel plate is fixed to the pastic moulding at the base of the sanding disc by two Phillip screws.






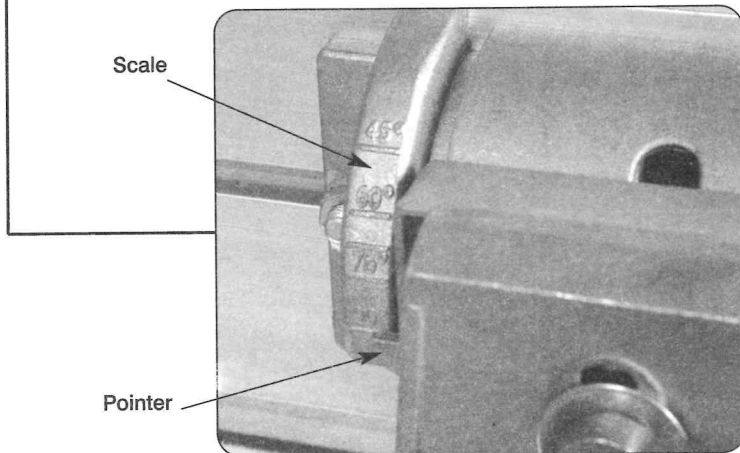


Fig 23

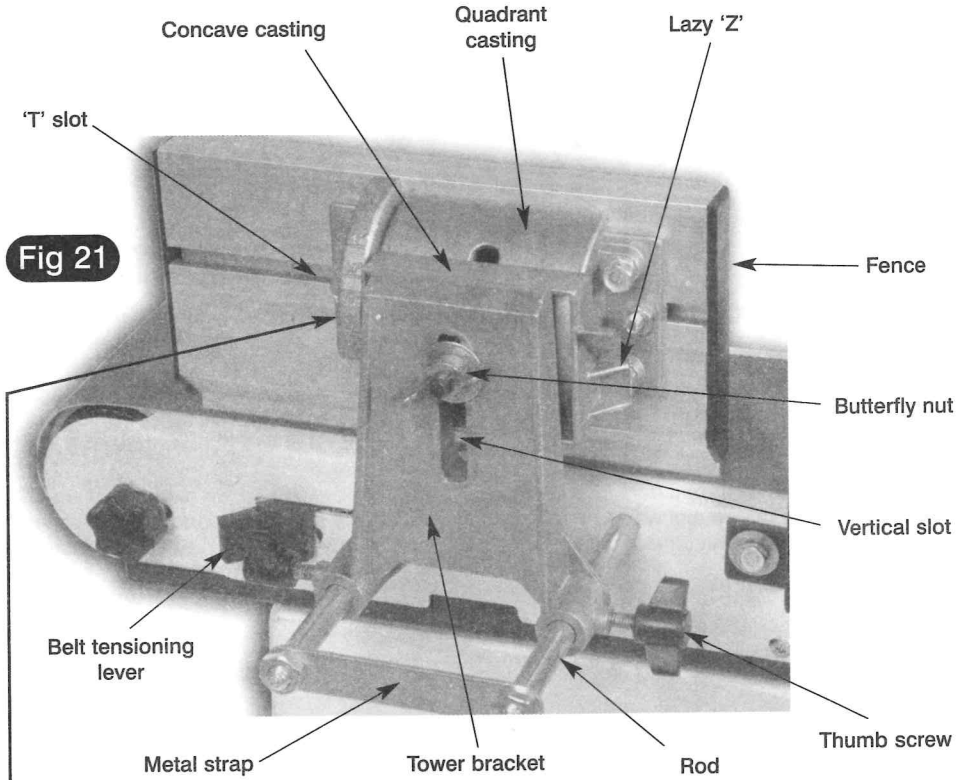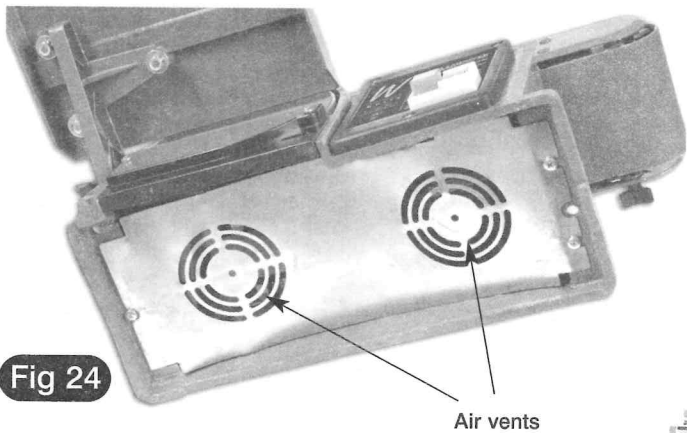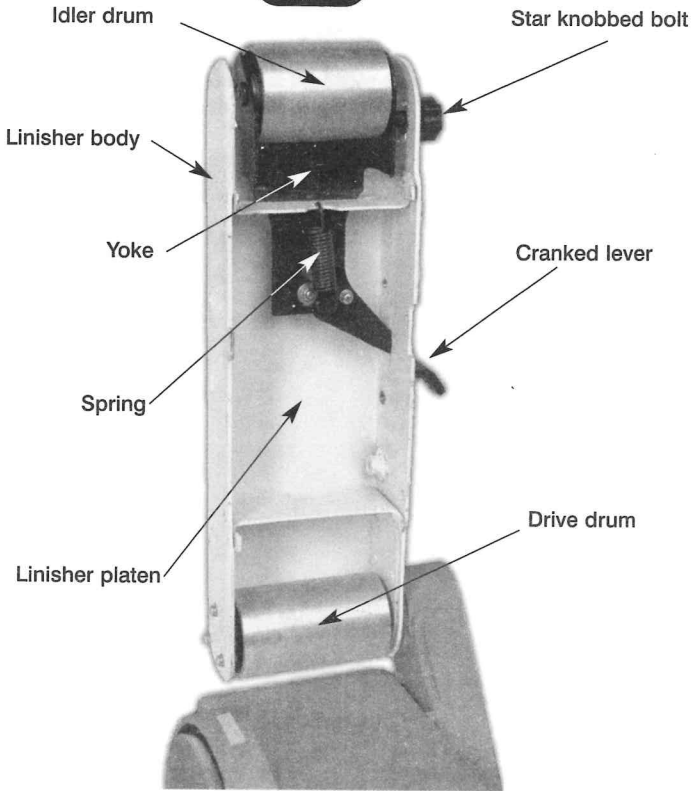

Raising the linisher to vertical

If you require to raise the finishing table to the vertical using the 6mm Allen Key provided loosen the swivel mandrel caphead bolt (See fig 11). Raise the linisher table either to its vertical stops or to the position required & re-tighten the swivel mandrel-clamping bolt.

Once the linisher is in the vertical position the work stop plate can be used to support small pieces while sanding.

Mounting the disc table to the Linisher

The sanding disc table can be mounted in place of the workstop plate to give more support and the use of the mitre fence.

Remove the work stop plate from the linisher chassis and place safely aside.

Undo the star threaded bolt and remove the table.

Line up the table to the embossed hole in the linisher chassis then introduce the star knob threaded bolt through the slot in the clamping quadrant and screw into the threaded hole in the linisher chassis. (See fig 25) Use a known 90° reference (square?) and check that the table is set square to the belt sander.

Introduce the table spigot into the hole in the linisher chassis.


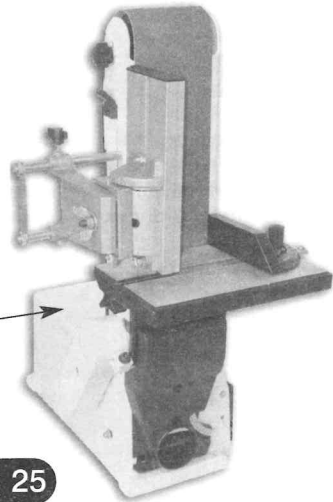


Fig 25

The disc table mounted to the linisher

introduce the star knob threaded bolt through the slot in the clamping quadrant and screw into the threaded hole in the linisher chassis.

Changing the Sanding Belt...

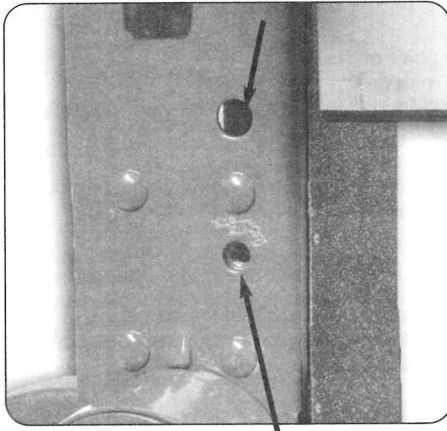


DISCONNECT THE MACHINE FROM THE MAINS SUPPLY

Slacken off the swivel mandrel-clamping bolt (See fig 11) then refer to "Fitting the Fence Assembly" to remove the necessary guards and covers. Release the belt tension by pressing the lever towards the drive drum (See fig 15) and slide the belt off the machine. (See fig 16)

Inspect the new belt, ensure that there are no tears or rips (especially along the edges), check the direction arrows on the inner surface of the belt and fit accordingly. (The direction of the arrows should point to the drive drum end of the machine).

Note: If you are using an old belt, and the arrow marking has worn off, check the direction of travel (see diagram below.)

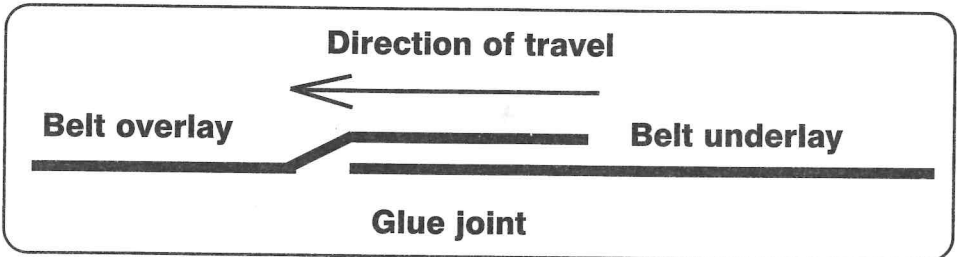

Tracking the belt

NOTE1: All directions are given from the view point of the operator standing behind the drive drum end looking down the length of the machine.

The tracking control works as follows:- turning the tracking adjuster clockwise will track the belt to the right, anti-clockwise will track the belt to the left.

DO NOT make large adjustments, and remember the belt may take some time to react to your alteration. Little by little is a good maxim to observe when carrying out tracking operations.

NOTE2: NOW here you can wear a glove.

Using your hand, roll the belt towards the drive drum end, check that the belt stays in the middle of the table, if not adjust the track control slightly, and move the belt again, continue until the belt runs down the centre of the finishing table.

When you are comfortable that the belt is tracking in one line, reconnect the mains supply, and switch the machine ON. Be prepared to adjust the original track setting as the belt being driven can generate slightly different dynamics to the belt being 'hand turned'.





DISCONNECT THE MACHINE FROM THE MAINS SUPPLY

Lift the edge of the disc and, gripping firmly, peel the disc away from the plate; turning the plate as required to free the entire disc.

Remove and throw away. If you have been extremely fortunate all the adhesive will have been removed with the disc. As this is rarely the case, be prepared to rub, scrape, pick etc., to remove all the odd patches of adhesive and render the plate **CLEAN**. Fit the new sanding disc as detailed in the instruction "Initial Assembly".

Maintenance



DISCONNECT THE MACHINE FROM THE MAINS SUPPLY

There is very little mechanical maintenance that can be carried out on the machine. Most prudent maintenance is preventative and concerned with keeping the machine clean.

Remove the belt and check there is no dust or resin build up on the drums or at the edges of the platen.

At reasonable intervals, turn the sander on it side and remove the ventilation plate by undoing the three securing screws, (See figs 26 & 27) inspect and remove all dust/resin build ups, and blow the motor clean.

Remove the lower sanding disc guard, the dust deflector and the extraction port moulding, remove any build up's and clean them thoroughly to allow the dust to travel over their surfaces smoothly.

Remove the drive belt cover and check that the belt is not frayed, worn or loose. (See figs 28,29) Replace all guards and covers, etc., Reconnect to the supply and start up the machine, check that nothing has disturbed the tracking.

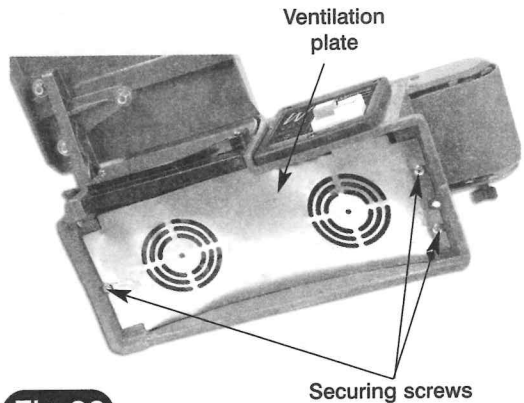


Fig 26


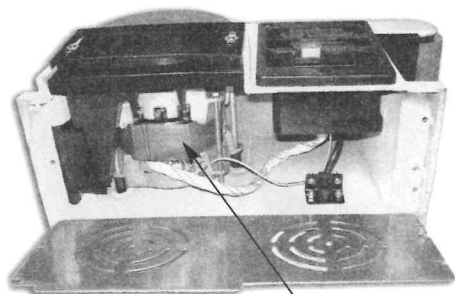


Fig 27



Fig 28

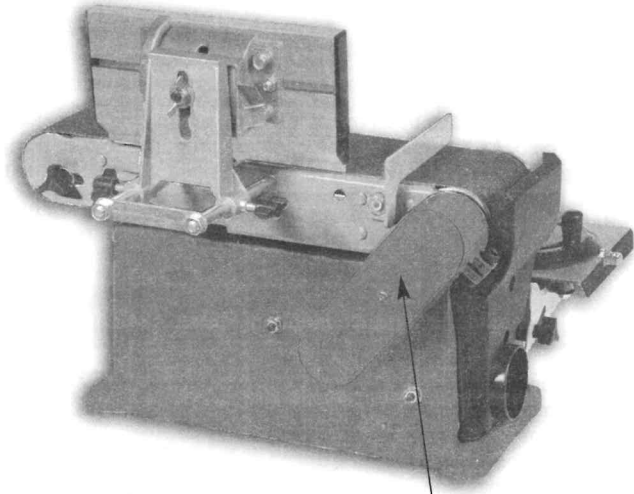

Drive belt


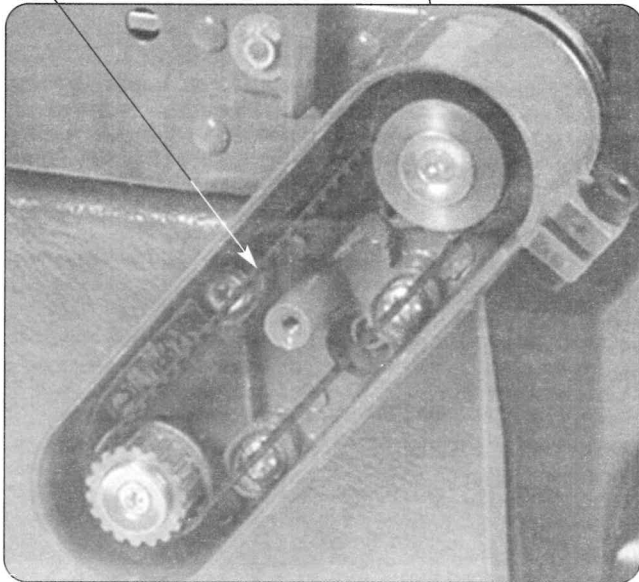


Fig 29



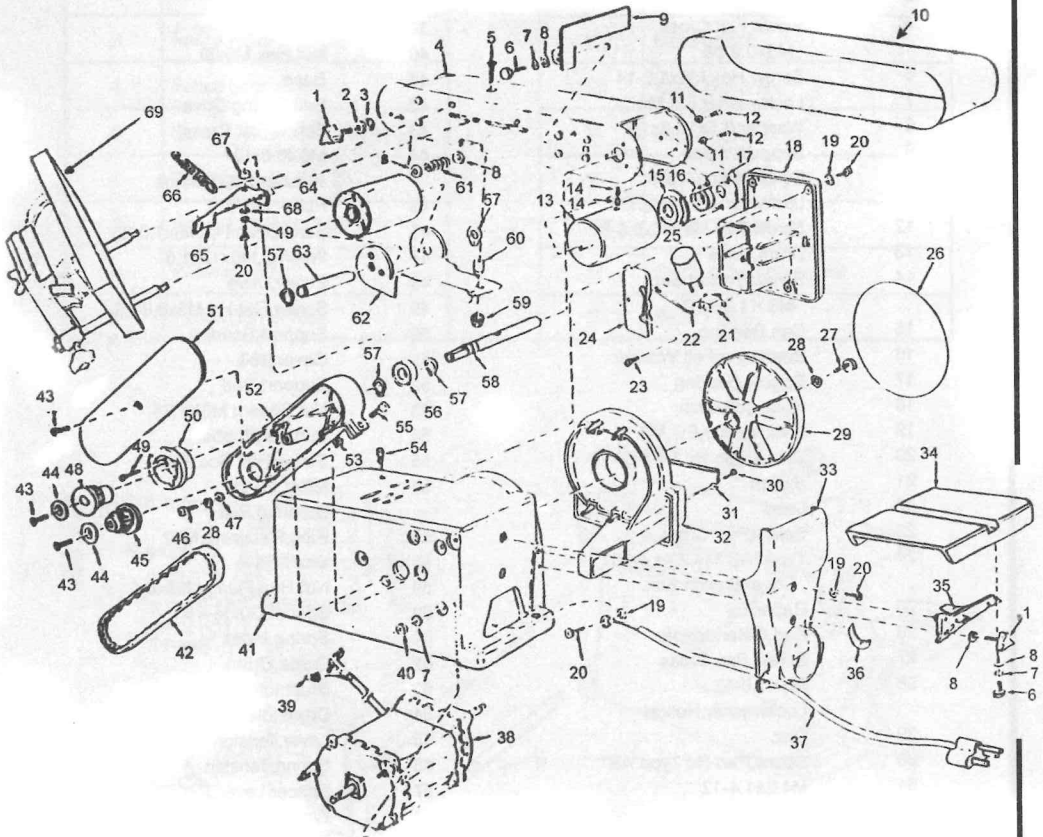


FREEPHONE 0800 371822

Key No.	Description
1	Knob
2	Washer,Rubber
3	Washer,Notched
4	Bed
5	Screw,Flat Cross M5x0.8-35
6	Screw Hex M6x1.0-14
7	Lockwasher,Ext.M6
8	Washer,6.5x17.8x1.6
9	Support,Work
10	Belt,Sanding4"x36"
11	Lockwasher,Helical M5
12	Screw,Pan Hd M5x0.8-8
13	Drum,Drive
14	Screw,Socket Set M8 x 1.25-10
15	Cap,Bearing
16	Bearing w/Felt Washer
17	Spacer,Bearing
18	Housing,Switch
19	Lockwasher,Ext.M5
20	Screw,Pan Hd.M5x0.8-16
21	Switch
22	Lead
23	Screw,Pan Cross
24	Type "AB" M4.2X1.4-30 Cover,Switch Box
25	Capacitor
26	Pad,6"Sandpaper
27	Screw,Pan Cross
28	M6X1.0-12
	Lockwasher,Helical
29	Disc
30	Screw,Pan Hd Type"AB"
31	M4.2x1.4-12 Guard,Disc
32	Shroud,Disc
33	Collector,Dust
34	Table

Key No.	Description
35	Support,Table
36	Label,Scale
37	Cord W/Plug
38	Motor
39	Connector;Wire
40	Nut,Hex M6x10
41	Base
42	Belt,Timing Drive
43	Screw,Flat Cross
44	M5X0.8-10 Washer,Counterxink
45	Pulley,Drive
46	Screw,Pan Hd.M6x1.0-25
47	Washer,M6x12x1.6
48	Pulley,Drive
49	Screw,Flat Hd.M5x0.8-25
50	Support,Bearing
51	Cover,Belt
52	Support,Bed
53	Nut,Squarc M8X1.25
54	Bumper,Rubber
55	Screw,Hex Soc. Cap M8x1.25-25
56	Bearing,Ball
57	Ring,Retaining M12
58	Shaft,Drive
59	Nut,Hex Flange M5x0.8
60	Spacer,Guide
61	Spring,Index
62	Guide,Drum
63	Shaft,Idler
64	Drum,Idler
65	Lever,Tension
66	Spring,Tension
67	Spacer,Lever
68	Washer,M5x15x1.2
69	Table Owner's Manual(Not Illus)



PART No.	DESCRIPTION	PART No.	DESCRIPTION
1	Guide Segment	10	Knob 6mm
2	Fence	11	Bridge Plate
3	Fence Right End Cap	12	Hex Nut M8
4	Fence Segment	13	Wing Nut 8mm
5	Screw - Hex. M8 × 25mm	14	Flat Washer 8mm
6	Carriage Bolt M6 × 20	15	Hex. Nut M6
7	Fence Left End Cap	16	Fence carrier
8	Washer - 8mm	17	Scale adjusting screw
9	Fence Carrier Rod	18	Slide Piece

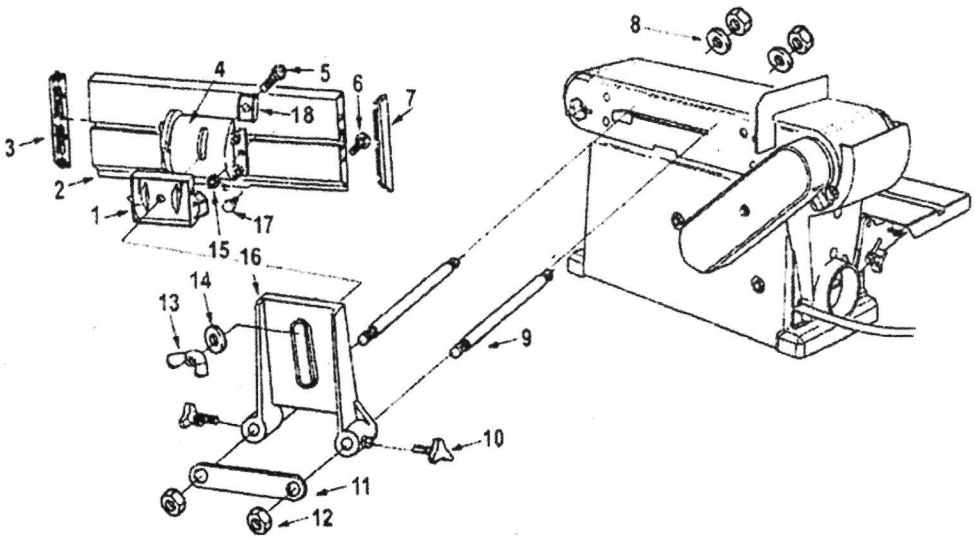


FREEPHONE 0800 371822



Belt & Disc Sander

600880

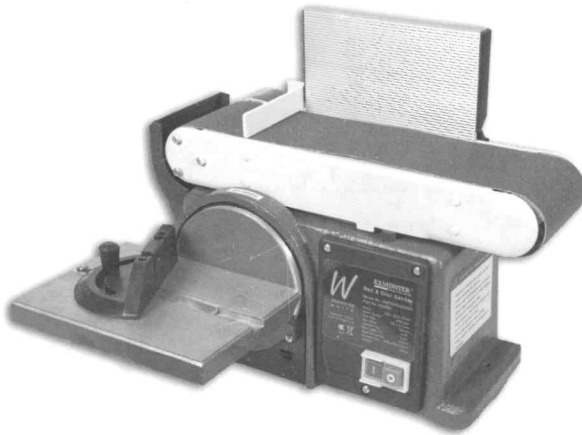

Axminster Reference No: **AWEBDS46MKII**



AXMINSTER
TOOL CENTRE

Axminster Devon EX13 5PH UK

FREEPHONE 0800 371822



www.axminster.co.uk

